



ReelBox Fernbedienung Serie Slim-Line Markenliste

Hier finden Sie die Liste der von der Fernbedienung unterstützten Hersteller. Suchen Sie den passenden Herstellercode in der Liste z. Programmierung heraus.

- Schalten Sie Ihr TV-Display ein.
- Halten Sie die TV/Reel-Taste für 4sec gedrückt. => Die rote LED blinkt jetzt 2x zur Bestätigung
- Geben Sie 003 ein
- Geben Sie den 3-stelligen Code für Ihren Display-Hersteller ein
- Halten Sie die I/O-Taste an der Fernbedienung gedrückt. Es werden jetzt alle bekannten Codes der Reihe nach durchprobiert. Lassen Sie die I/O-Taste los, sobald das Display ausschaltet. - Drücken Sie OK zur Bestätigung und um die Programmierung abzuschließen.

Hersteller	Code	Hersteller	Code	Hersteller	Code
Akai	122	Alba	137	Anitech	143
Ansonic	121	Audiosonic	143	Basic Line	117
Baur	113	Beko	128	Blaupunkt	118
Blue Skyb	138	Blusens	104	Brandt	149
Bush	137	Clatronic	121	Crown	148
Daewoo	143	Dual	113	Elbe	139
Emerson	121	Ferguson	153	Finlux	152
First Line	148	Fisher	101	Funai	148
Goldstar	127	Goodmans	144	Granada	131
Grundig	155	Hanseatic	151	Hitachi	154
Hyundai	109	Imperial	120	Infratex	100
Interfunk	120	Intervision	143	Irradio	143
Itt	149	Jvc	107	Kendo	138
Lg	117	Lifetec	143	Loewe	105
Luxor	150	M Electronics	150	Matsui	114
Medion	139	Metz	119	Mitsubishi	102
Neckermann	151	Nokia	145	Nordmende	149
Orion	136	Others	132	Otto Versand	129
Panasonic	110	Philco	120	Philips	146
Pioneer	123	Proline	111	Prosonic	128
Quelle	156	Roadstar	143	Saba	115
Salora	150	Samsung	140	Sanyo	125
Schaub Lorenz	128	Schneider	141	Seg	130
Seleco	103	Sharp	106	Siemens	108
Silva Schneider	124	Sinudyne	151	Sony	133
Swisstec	116	Tatung	112	Telefunken	134
Tensai	130	Tevion	138	Thomson	147
Thorn	135	Thorn-Ferguson	153	Toshiba	126
Uma	118	United	137	Universum	142



Fernbedienung - TV Funktion programmieren

Start Programming Mode.

Long press of "TV/Reel" key (aprox. 3 Sec.), till red LED blinks twice.

Exit programming mode after 10 sec. of inactivity or after the press of the key TV/Reel".

001 - Codesearch

- Start programming mode.
- Put in the code 001; the red LED blinks 2x for code OK or the red LED lights for 2 sec. in the case of false code.
- Press the „Power“ key and keep it pressed till the TV set switches off.
- The key "OK" saves the actual table.
- The end of database will be indicated by 5x blinks of the red LED.
- In the case the Code search was interrupted, a following search will start with the next to stop table and not at the beginning of the database.

003 – Brandsearch

- Start programming mode.
- Put in the code 003; the red LED blinks twice.
- Enter the 3-digit code of the brand/manufacturer; the red LED blinks 2x for code OK or the red LED lights for 2 sec. in the case of false code.
- Press the „Power“ key and keep it pressed till the TV set switches off.
- The key "OK" saves the actual table.
- The end of brand table will be indicated by 5x blinks of the red LED.

xxx Direct Programming

- Start programming mode.
- Put in the 3-digit code for your TV set (from code list, one after another); the red LED blinks twice for a correct code or lights two sec. in red for a inexistent code.

002 Query the stored 3-digit code

- Start programming mode.
- Put in the code 002; the red LED blinks twice.
- Press „1“ for the first digit „2“ for the second and „3“ for the third digit and count the number of red LED flashes.
- There are no flashes for digit "0".

004 – Start Learning mode (in default settings)

- Start programming mode.
- Put in the code 004; the red LED blinks twice.
- Press the key to be learned on (only the keys with TV functions can be learned: Stand-by, Volume+/- and Mute). The red LED blinks twice to confirm (no confirmation means the key is not learnable).
- Orange lighting signalises readiness.
- Press the key to learn (on original RC) for aprox. 1 sec. The green LED blinks in the case of good signal, or the red LED lights for a poor one; in this case press again the key to learn, but only after the ES RC signalises readiness again (orange lighting).
- Two green flashes indicate the key was successfully learned.
- The procedure will be repeated for other keys.
- Quit the learning mode by a one sec. press of key "TV/Reel".

009 – Learn settings

- Start programming mode.
- Put in the code 009; the red LED blinks twice.
- Put in the one digit code:
 - 0 – for learning with one key press per function (this is the default)
 - 1 – for learning with 2 key presses per function (for the recognition of toggle commands)
 - 2 – for learning with distance test and one key press per function
 - 3 – for learning with distance test and two key presses per function
- The red LED flashes twice (the settings have been saved).

010 – Test Learning distance

- Start programming mode.
- Put in the code 010; the red LED blinks twice.
- Orange lighting signalises readiness.
- Press a key of the original RC and adjust the distance to the ES RC (the two RC's are positioned sending diode to sending diode aprox. 10 cm in between) till its green LED flashes.
- Quit the test with the „OK“ key.

000 – Reset

- Start programming mode.
- Put in the code 000; the red LED blinks twice.
- The RC is set back to the default (no TV set programmed, learning memory emptied).